

## Torch Does not Stop Firing

### Problem:

- The torch never lifts during the g-code.
- The machine is cutting during the first rapid travel movement.

### Verification:

- There are no instances of M65 (tool off) in the G-Code
- There is a M64 code prior to the first G00 command

### Solution:

1. Verify that the Tool is set to Multi Tool when in the Machine->Output menu. See cause #1. Check out the video regarding posting the G-Code using this [link](#). Pay attention to video at 1:10 when discussing posting the G-Code file
2. Download the updated gcode53.dll file from [here](#). See cause #2
  - i. Close out of the Torchmate CAD software.
  - ii. Copy and paste the new file to C:\Torchmate CAD-CAM V9
  - iii. A prompt will appear stating that a file with the same name exists. Select the option that states Copy and Replace.
  - iv. Open the Torchmate CAD software and attempt to post a new G-Code file.

### Cause:

1. The Tool is set to Plasma. When the Tool is set to Plasma, the post processor never executes a M65 (tool off) command.
2. An update to the PC occurred which altered information in the previous gcode53.dll file.