

TECH BULLETIN- Procedure to adjust the breakaway force difficulty.

The following steps below describe how to adjust the magnet in the breakaway further in or out to increase the amount of force it takes to break the unit away, or decrease the amount of force to break it away.

Step 1. Loosen the middle screw from the back of the breakaway (not pictured), 1 to 2 complete turns.

Step 2. Adjust the 3 perimeter screws evenly on the front of the unit, starting with one-half turn increments.

Step 3. Tighten the middle screw to hold the magnet in position.

Step 4. Re-attach breakaway, and check breakaway force. Repeat these steps if necessary.

